

Calibration

MODE 1 x → mm/m

MODE 2 x → %

MODE 3 x → in/ft (decimal)

MODE 4 x → in/ft (fractional)

5

Calibration

Power + MODE 1 x → -1-

Power 1 x → -2-

180°

Power 1 x → done

7

Calibration

HOLD 2 sec. → INC

HOLD 2 sec. → ABS

6

Calibration

Power + MODE 1 x → -1-

Power 1 x → -2-


180°

Power 1 x → done





8

## QUICK START

### ENW/ENWM LASERTRONIC ELWX

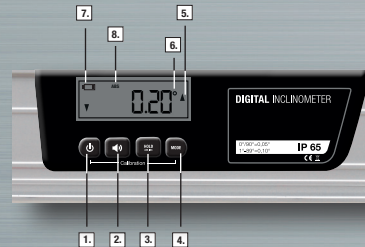

- 1 On/off switch / Display light
- 2 On/off switch acoustics (signal at 0° and 90°)
- 3 Hold function (measurement is retained by pressing once) / Switching between ABS (absolute) and INC (incremental)
- 4 Mode button for switching between measured value settings (°, mm/m, %, in/ft)
- 5 Arrows show in which direction the spirit level has to be moved
- 6 Display ° / mm/m / % / in/ft
- 7 Display in the case of low battery voltage
- 8 Display of ABS or INC

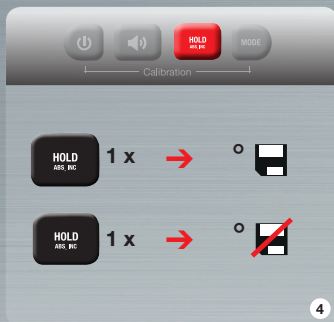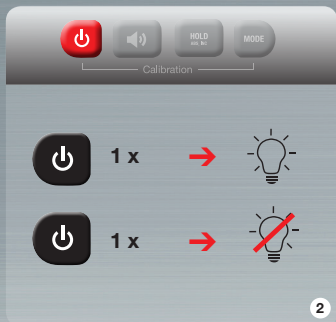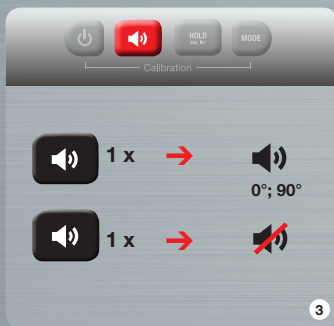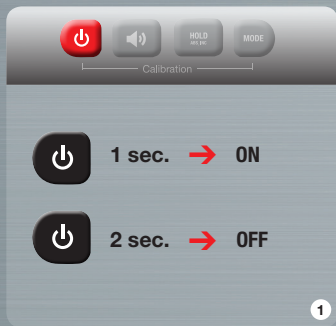

## SOLA-Messwerkzeuge GmbH

Unteres Tobel 25, A-6840 Göttsis

Tel: +43 (0)5523 53380-0, Fax: +43 (0)5523 53385

sola@sola.at, www.sola.at



Please find the operating instructions on  
www.sola.at



R373263

