



Abstützarm richtig ansetzen!

6.2.1 Drehmomenteinstellungen

	S1500	S3000	S6000	S11000	S25000
Pumpendruck (bar)	Drehmoment (Nm)	Drehmoment (Nm)	Drehmoment (Nm)	Drehmoment (Nm)	Drehmoment (Nm)
69	190	434	814	1.491	3.408
83	228	520	977	1.789	4.089
97	266	607	1.140	2.087	4.771
110	304	694	1.303	2.385	5.453
124	341	780	1.466	2.683	6.134
138	379	867	1.629	2.981	6.816
152	417	954	1.792	3.279	7.497
166	455	1.041	1.955	3.577	8.179
179	493	1.127	2.117	3.875	8.860
193	531	1.214	2.280	4.173	9.542
207	569	1.301	2.443	4.472	10.224
221	607	1.388	2.606	4.770	10.905
234	645	1.474	2.769	5.068	11.587
248	683	1.561	2.932	5.366	12.268
262	721	1.648	3.095	5.664	12.950
276	759	1.734	3.258	5.962	13.631
290	797	1.821	3.42	6.260	14.313
303	835	1.908	3.583	6.558	14.995
317	873	1.995	3.746	6.856	15.676
331	911	2.081	3.909	7.154	16.358
345	949	2.168	4.072	7.453	17.039
359	986	2.255	4.235	7.751	17.721
372	1.024	2.341	4.398	8.049	18.402
386	1.062	2.428	4.561	8.347	19.084
400	1.100	2.515	4.724	8.645	19.766
414	1.138	2.602	4.886	8.943	20.447
428	1.176	2.688	5.049	9.241	21.129
441	1.214	2.775	5.212	9.539	21.810
455	1.252	2.862	5.375	9.837	22.492
469	1.290	2.948	5.538	10.135	23.173
483	1.328	3.035	5.701	10.434	23.855
497	1.366	3.122	5.864	10.732	24.537
510	1.404	3.209	6.027	11.030	25.218
524	1.442	3.295	6.189	11.328	25.900
538	1.480	3.382	6.352	11.626	26.581
552	1.518	3.469	6.515	11.924	27.263
566	1.556	3.556	6.678	12.222	27.944
579	1.593	3.642	6.841	12.520	28.626
593	1.631	3.729	7.004	12.818	29.308
607	1.669	3.816	7.167	13.116	29.989
621	1.707	3.902	7.330	13.415	30.671
634	1.745	3.989	7.492	13.713	31.352
648	1.783	4.076	7.655	14.011	32.034
662	1.821	4.163	7.818	14.309	32.715
676	1.859	4.249	7.981	14.607	33.397
690	1.897	4.336	8.144	14.905	34.079

Achtung!

Inbetriebnahme des Schraubers

NUR mit Beachtung der

BEDIENUNGSANLEITUNG

und dem richtig aufgesetztem

REAKTIONSSARM da sonst

BRUCHGEFAHR besteht!!!